



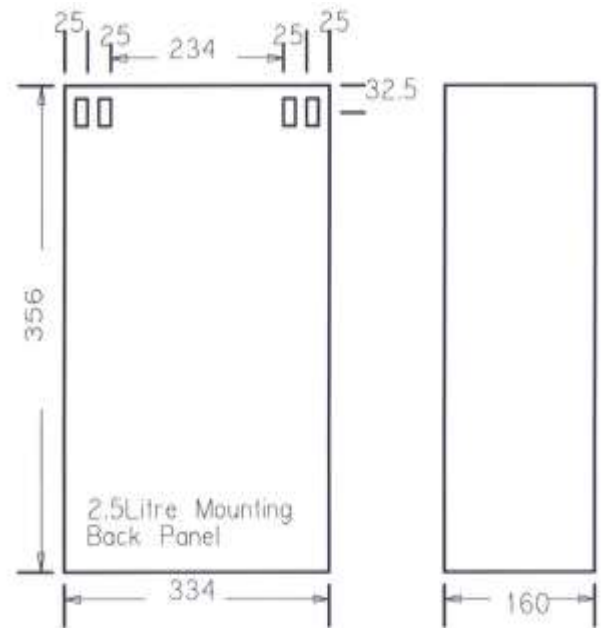

Installation: For Automatic Oversink Water Boilers

WARNING! Do Not Plug in Power Cord until Boiler is Full of Water

1. Mount the Unit on the Wall in a suitable position through Holes in Back Plate Use Screws strong enough to hold the Boilers Weight Full of Water
2. Fit the Outlet Tap to the front of the Boiler
3. Connect the Cold Water Inlet (1/2" BSP) Turn on Water supply and Fill Unit
4. Connect Drain to Overflow (1/2" BSP) Note: Drain and Discharge Position must be capable of handling Boiling water
5. Open Outlet Tap to ensure Water Level is above this Point
6. Plug in Power lead and Turn on
7. Test Water Temperature and Check for any Leakage via Fittings
8. **The Element installed in this unit is a Digital device- Do Not Mega**

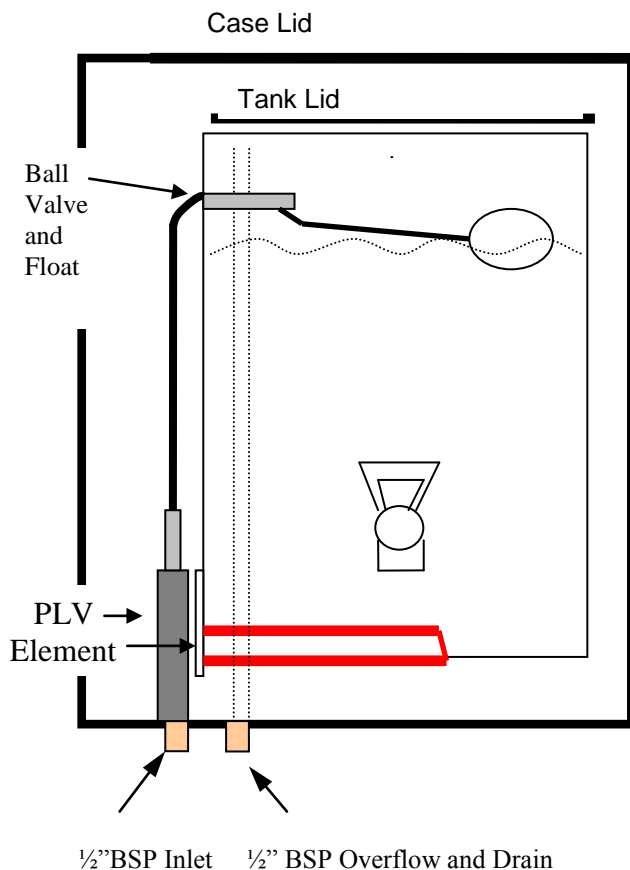

Warranty: This water Boiler is Guaranteed for a Period of One Year from Date of Purchase This Guarantee applies only to defects occurring under normal conditions of use and Damage caused by incorrect Installation or failure caused by aggressive water or other substances introduced through the water supply or Incorrect Voltage will not be covered.

Manufactured by Sigma Sheetmetal Products Ltd, 24 Princes St, Onehunga, Auckland
 P.O.Box 13013 Onehunga, Auckland. PH 096363657
www.sigmasheet.co.nz sales @sigmasheet.co.nz